


Frequently Asked Questions

How do I change the font size on the Responder Screen?

Renaissance Responders can use either a small or large font size on the screen. To change the font size that you are using, follow the steps for updating the Responder firmware.

If the Responder is not already on, press the **On/Off** button.

If necessary, enter the Personal Identification Number (PIN) for the student owner and press **Enter**.

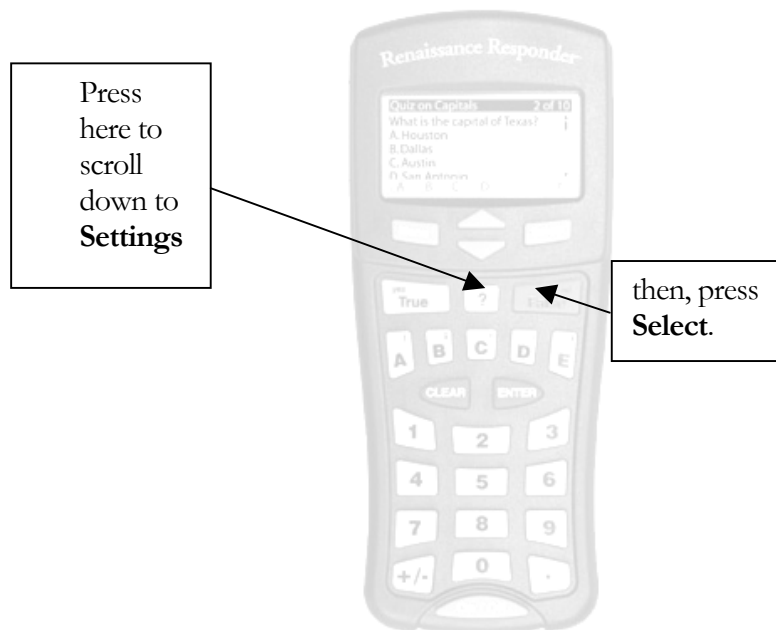

Scroll down to Firmware Update then, press Select

The Responder will ask if you want to stay connected to your Renaissance Receiver. Press yes (True) then press Select.

The Responder will search for the update and display it when it is found. Use the arrows to highlight the firmware version that you want to use. For each firmware release, you will see an even-numbered version and an odd-numbered version. **Even numbers use the large font; odd numbers use the small font..** Usually it is best to select

the highest odd or even number, this will update you with the latest version. Press Select.

When the Responder asks you to, enter the administrator PIN (if you have not changed it, the PIN is 1234); then, press ENTER. and the responder will then display the font size you have loaded.